




TEMMELOG 2081# Left Corner Sofa

A  ×1 PC	B  ×1 PC	C  ×1 PC	D  ×4 PCS	E  ×4 PCS	F  ×1 PC
---	--	--	---	---	--

STEP 1:

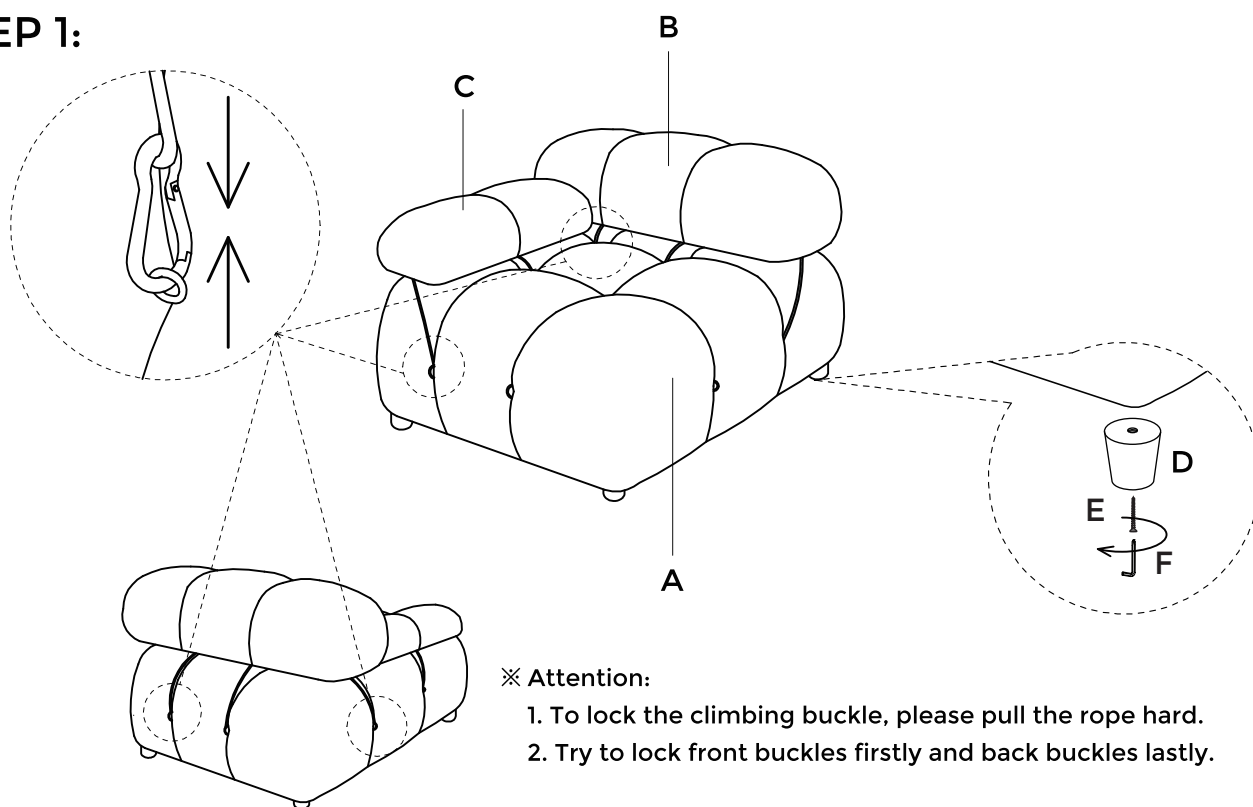


STEP 2:

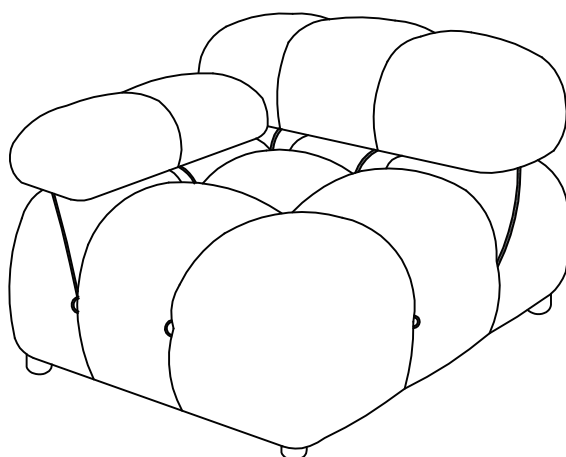


EN/PL/DE ASSEMBLY INSTRUCTION/INSTRUKCJA MONTAŻU/MONTAGEANLEITUNG


TEMMELOG 2081# Right Corner Sofa

A  ×1 PC	B  ×1 PC	C  ×1 PC	D  ×4 PCS	E  ×4 PCS	F  ×1 PC
---	--	--	---	---	--

STEP 1:

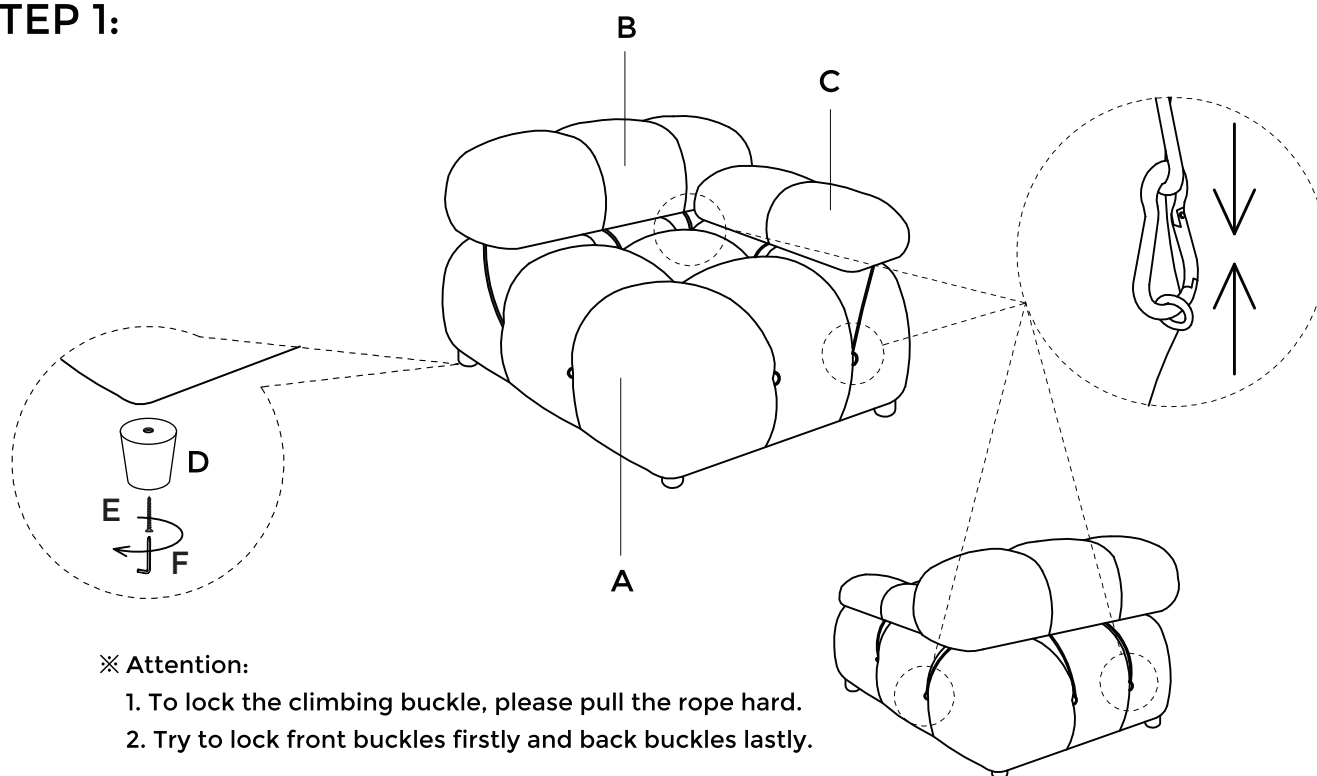


STEP 2:

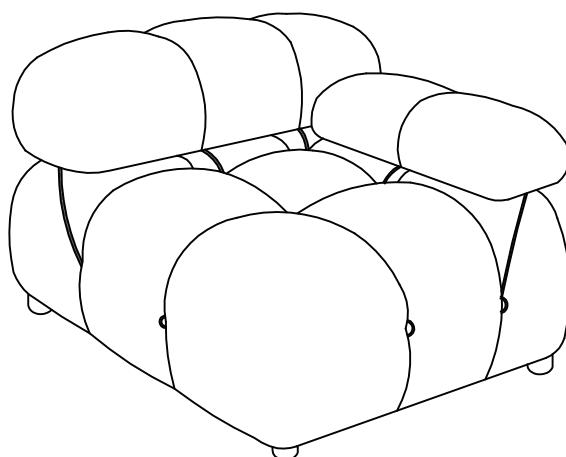


EN/PL/DE

ASSEMBLY INSTRUCTION/INSTRUKCJA MONTAZU/MONTAGEANLEITUNG


TEMMELOG 2081# ARMLESS

A  ×1 PC	B  ×1 PC	C  ×4 PCS	D  ×4 PCS	E  ×1 PC
--	--	---	---	--

STEP 1:

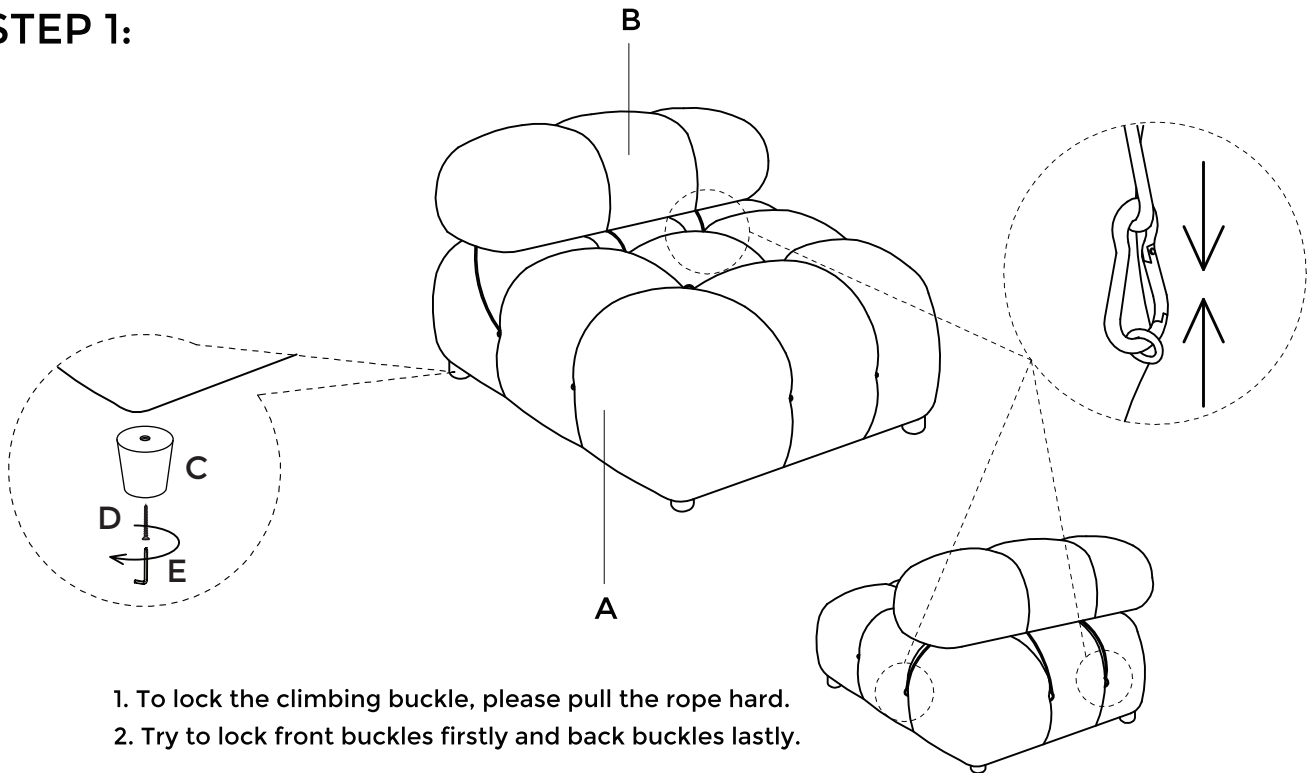


STEP 2:

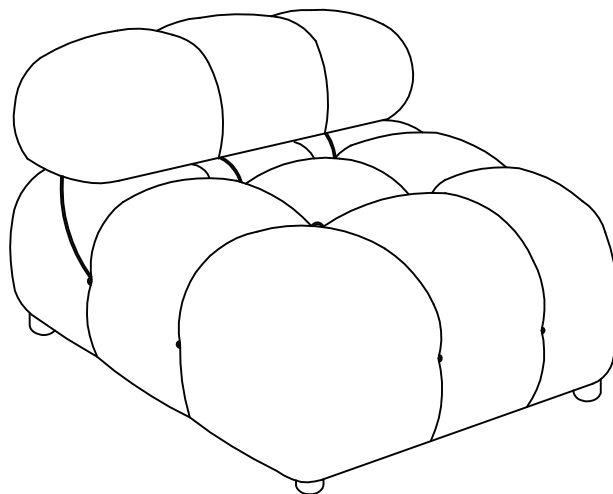

EN/PL/DE
ASSEMBLY INSTRUCTION/INSTRUKCJA MONTAZU/MONTAGEANLEITUNG
TEMMELOG 2081# OTTOMAN

A



x1 PC

B




x4 PCS

C




x4 PCS

D



x1 PC

STEP 1:

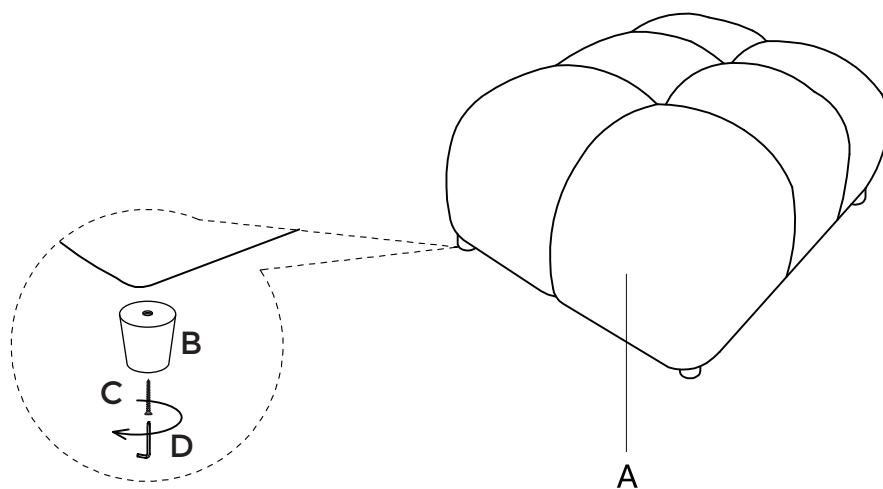

STEP 2:

